

Snapshot

The OptiPure® BWS1500/175 HF Water Treatment System utilizes Reverse Osmosis (RO) to remove >97% of the Total Dissolved Solids (TDS) from water. Then, a balance of minerals is dissolved into the RO water, followed by a precision blend valve for further TDS adjustment, to provide desirable optimized water TDS. The system is pump-driven and will produce up to 1500-gallons per day of optimal quality water for applications where TDS reduction or the removal of the majority of hardness minerals is required. This complete system includes integrated pre-filtration with particulate and chlorine reduction, reverse osmosis, blend valve and mineral addition, in a space saving, wall-mounted design. Adjustable reject flow control allows precise adjustment of product/ reject ratio. A built-in full system bypass valve and sample port assures no service interruption and simplifies routine maintenance. Also included is a 175-gallon atmospheric storage tank (with a sub-micron air breather) with a 1 hp floor-mounted repressurization pump, a 16-gallon buffer tank assembly and a 1/2" outlet that allows for high-flow applications. Hose, tubing and fittings required for installation are included.

System Benefits

- Significantly reduces scale and corrosion problems related to high TDS, water hardness and chlorides.
- · High flow delivery system for high demand applications.
- Microprocessor controller provides system status and pump time-delay on start-up for pump protection.
- Rotary vane pressure pump assures consistent production.
- Adjustable reject flow control minimizes water use due to seasonal fluctuations in water temperature.
- High capacity Pre-filters take out sediment and chlorine and protect the RO membrane.
- Precision blending valve allows the user to accurately and precisely blend filtered water with mineral-addition water to a desired optimized TDS Level.
- Digital before and after TDS meter for push-button monitoring of membrane performance and optimized water quality.
- Sample port enables quick and simple system checks and adjustments.
- Built-in pressure gauge allows visual monitoring of operating pressure.
- Integrated system bypass valve eliminates down-time or service interruptions.
- · All consumables are easy-to-change Qwik-Twist cartridges.

Model: BWS1500/175 HF

Part #: 164-15575

| ITEM #: | QTY: |
|------------------|------|
| IOB NAME/NUMBER: | |



Application

Any foodservice equipment where it it desireable to remove existing Total Dissolved Solids (TDS) and provide a consistent balance of buffered TDS. Designed for multiple point-of-use applications where up to 10.0 gpm is required.

Installation Tips


- Feed-water connection to system should be COLD only.
- Do not exceed system specifications for temperature and pressure.
- Provide a dedicated water line of at least 1/2" I.D. to the unit for consistent flow and pressure to the system.
- Allow 3" clearance below system for filter cartridge removal and replacement.
- Connect filtered water line to steam production connections only. Do not use for condenser water.
- Detailed installation, operation and maintenance manual included with each system.
- Mount the unit where it can be easily viewed and accessed.


OptiPure

Model: BWS1500/175 HF


Part #: 164-15575

Water Processor Assembly - 120V

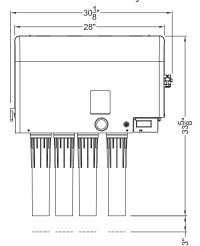

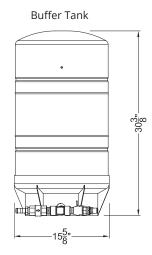

Storage Tank Assembly

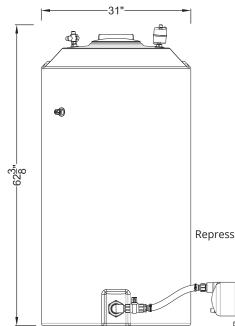

| Feed TDS | Up to 1200 ppm | |
|------------------|-------------------|--|
| Feed pH | 6-10 units | |
| Hardness* | 12 grains or less | |
| Free Chlorine | <2 mg/l | |
| Iron | 0.1 mg/l max | |
| Turbidity | 0.05 NTU | |
| Manganese | 0.05 mg/l max | |
| Hydrogen Sulfide | 0.0 mg/l | |

Feed-Water Chemistry

*For water outside of these parameters call OptiPure technical service.

WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov.

Repressurization Pump - 120V

Warranty

All system components and assembly except for filter cartridges, separation membranes, permeate pumps, electric motors, diaphragm pumps, and rotary vane pumps shall be warranted against defects in workmanship for a period of 60 months from the date of original shipment. For complete warranty information, contact OptiPure customer service or go to www.optipurewater.com

Dealer/Distributor Info:

▶ Specifications

| System | | |
|--|---|--|
| Dimensions - RO Processor | 33.6"h x 30.1"w x 9.1"d | |
| Dimensions - Tank | 62.4"h x 31" dia. | |
| Dimensions - Buffer Tank | 30.4"h x 15.6"dia. | |
| Connection - Feedwater | 1/2" Push Fit Tubing | |
| Operating Pressure Range | 30 - 90 psi at 2.5 gpm (2.1 - 6.2 bar) | |
| Inlet Water Temperature Range | 40° - 100°F (4° - 38°C) | |
| Shipping Weight | 300 lbs. | |
| Drain Connection | 5.0 gpm Minimum Flow | |
| Power - Water Processor | 120V 60Hz 6 Amps | |
| Power - Repressurization Pump | 120V 60Hz 10 Amps | |
| Performance | | |
| Typical TDS Rejection | >97% | |
| Product Water Production (at 77°F, 60 psi Net Operating Pressure) Production rate is strictly dependent on feed water temperature and pressure. | 1,500 gals./day 62 gals./hr 1.0 gpm | |

Replacement Media

| Model | Model Description | | Qty |
|------------------------|-------------------|-----------|-----|
| CTO-Q Pre-Filter | | 300-05830 | 3 |
| AMS-QT4021XLE Membrane | | 204-44021 | 1 |
| MA-Q15 | Post-Filter | 300-05855 | 1 |

▶ Options

| Model | Description | Part Number |
|-------------|-------------------------------------|-------------|
| Air-Gap Kit | Approved Air-Gap Kit for Drain Line | 164-89905 |

It is recommended that pre/post-filters and mineral addition cartridges are changed every 6 months, when capacity is reached or when feedwater pressure or flow becomes inadequate.

Membrane life varies depending on feedwater conditions and pre-filter maintenance. It is 12-18 months under typical conditions, but it can be

This product is for commercial use only and must be installed and maintained according to manufacturer's guidelines.

Do not use on water that is microbiologically unsafe or of unknown quality without adequate disinfection before or after the system.

OptiPure, A Division of Aquion, Inc.

101 S. Gary Ave., Suite A Roselle, IL 60172 p: 972.881.9797 e: info@optipure.net www.optipurewater.com

Installation Diagram

